




DETAIL "A"

DETAIL "B"

## FACE ANGLE AND ANCHOR

## NOTE:

 When shown on the project plans, place a ¾"ø plain round protection bar horizontally across the length of the opening and bend back 4" into the inlet wall on each side.

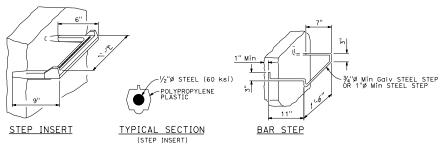

STEP DETAILS

FACE ANGLE DETAIL "A"

ANCHORS

LENGTH OF


CURB OPENING

3'-6" OR LESS

7'-0" 10'-0" 14'-0"


21'-0"

09

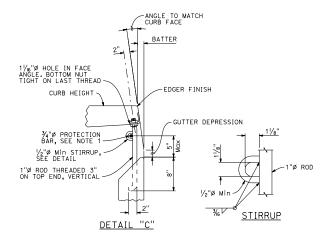

## **CURB SUPPORT**

CURB SUPPORTS SHALL BE EVENLY SPACED AND MINIMAL IN NUMBER SUCH THAT MAXIMUM SPAN OF UNSUPPORTED CURB IS 7'-0".



CURB OPENING DETAILS

STATE OF CALIFORNIA
DEPARTMENT OF TRANSPORTATION

## DRAINAGE INLET DETAILS

NO SCALE

**D74**